



ECM-RL12LVD

Low-Voltage Relay Module

Quick Reference Guide (revision 1.20)

OVERVIEW

The Highcross ECM-RL12LVD module provides twelve low-voltage low-current relay outputs for switching a wide range of third-party devices.

All channels are normally open and switched-off when the power is off.

The control, data exchange and configuration are all handled via TCP/IP protocol.

The module is designed to be installed on a standard 35 mm DIN rail.


SPECIFICATIONS

Number of relay outputs	12
Maximum switching current of relay output	1 A
Maximum switching voltage of relay output	30 VDC or 60 VAC
Supply voltage (power terminals and PoE)	+12 ... 48 VDC
Consumption current	250 mA at +12 VDC
Enclosure	5M DIN rail box, UL94-V0 flame retardant PC

Operating temperature	-20°C ... +45°C (-5°F ... +115°F)
Operating humidity	5 ... 80% RH non-condensing
Dimensions	90 x 88 x 58 mm (3.54" x 3.46" x 2.28")
Weight	190 g (0.420 lbs)
Supported data exchange protocols	NetString ModBus TCP ModBus RTU over TCP

DEVICE CONTROL COMPONENTS

FACE PANEL COMPONENTS	
1...12	Activity indicators of channels 1...12
status	Indicates power status and connection to controllers
link/act	Ethernet link and activity indicator
reset	Multifunctional button (reboot, reset, boot-loader)
TERMINAL PANELS	
LAN	Ethernet network and PoE power connector
relays 1...12	Terminals of relay contacts
PWR	Power supply terminals (+12...48 VDC)

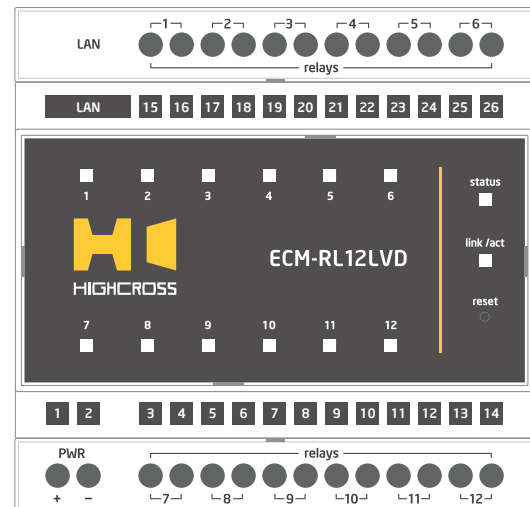

LED "status" indicates the power connection and connection status with controllers	
Off	No power connected
Blink (1 Hz)	No connection with external controllers
Fast blink (4 Hz)	The device is in bootloader mode
On	Connected to external controllers

LED "link" indicates Ethernet network link and activity	
Off	No connection to Ethernet network
Blink	Connected to Ethernet network Receiving Ethernet data packets
On	Connected to Ethernet network No network activity

LEDs "1...12" display status of outputs	
Off	Output is off
On	Output is on

Multifunctional button "reset"

To reboot the device push the button for 1 second

To reset the device to factory defaults push and hold the button for 5 seconds.

IP-address will be set to 10.0.1.101, subnet mask - to 255.255.255.0. All other settings will be set to default values

For firmware update, power off the device, push and hold the button and power the device on. Release the button after the LED "status" will start to blink fast.

The network settings of the device started in bootloader mode are: IP-address - **10.0.1.101**, subnet mask - **255.255.255.0**

The **PWR "+"** and **"-"** terminals are designed to power the device +12...48 VDC if connected Ethernet switch has no PoE support.

SETUP AND CONFIGURATION

The configuration of the module is handled via web-interface.

To start working with the device:

- Connect the device to the Ethernet switch. If the switch has no PoE support, connect the power +12...48 VDC to the **PWR** terminal
- Ensure that your computer can connect to the network address 10.0.1.101 or set the TCP/IP settings of active network adaptor to: IP address - **10.0.1.100**, subnet mask - **255.255.255.0**
- Enter **10.0.1.101** in address bar of your web-browser
- Enter: login - **root**, password - **root**
- Configure the device settings

The web-interface contains the next web-pages:

Home	Displays the hardware revision and the firmware version
Settings	Network settings, type of data exchange protocol, outputs settings
Control	Displays current state of outputs. Direct control of relay outputs
Status	Displays current TCP/IP connections and device uptime info

For further information refer to www.highcross.com